
Invisacook[®] induction unit Design & installation guide



REV. 00 - 02/2024

Dekton® surface basic requirements

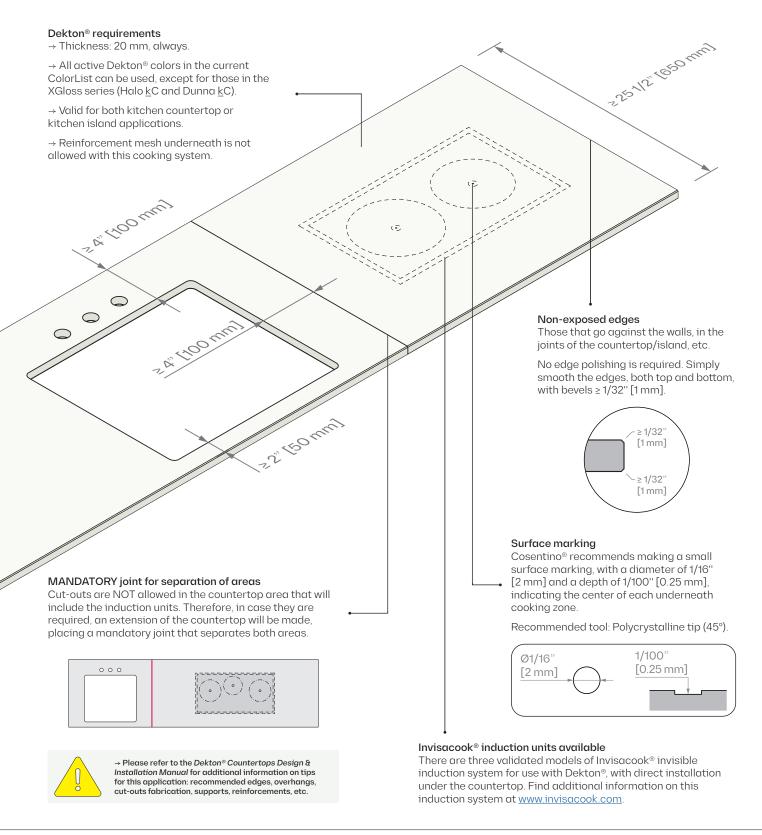


COSENTINO

Invisacook[®] induction unit Design & installation guide



REV. 00 - 02/2024

Invisacook® induction system basic concepts

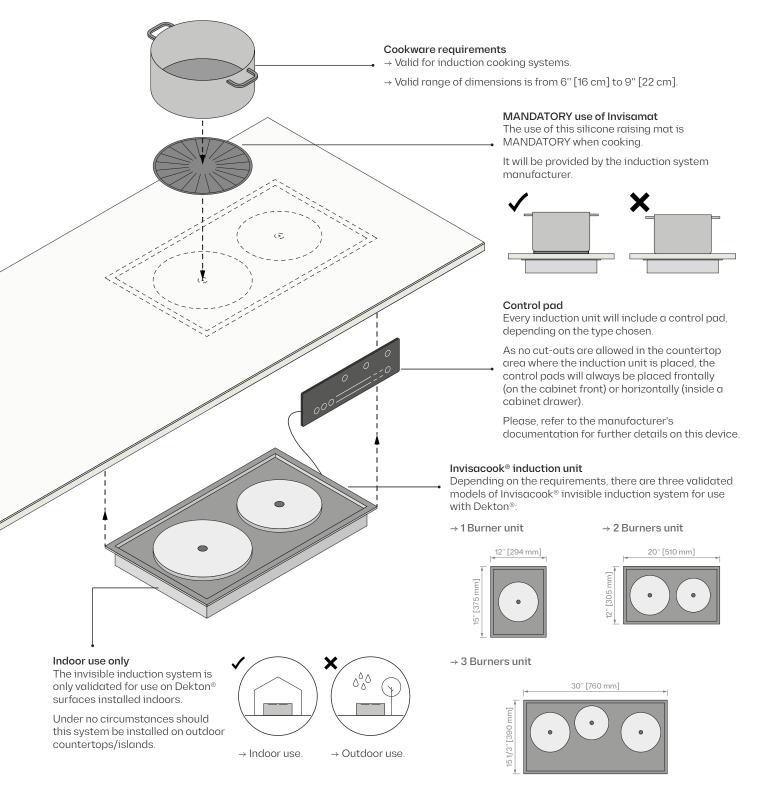

Invisacook[®] induction unit Design & installation guide

DEKTON[®]


REV. 00 - 02/2024

Design, installation & use requirements


Minimum distances to edges

The minimum distance (D) set will be a minimum of 10" [250 mm] from the center axis of each induction burner to any of the edges/joints (front, rear, and sides). This way, and depending on the type of induction unit chosen, we have:


→ 1 Burner unit

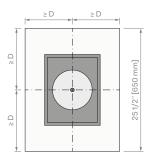

\rightarrow 2 Burners unit

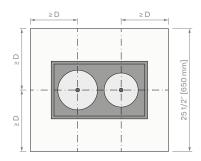


\rightarrow 3 Burners unit

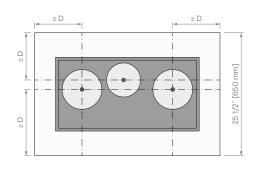

Panoramic configuration & distances


The minimum distance between units, for any combination (1 + 1, 1 + 2, 2 + 2, etc.), will be determined by the space occupied by the installation elements (clips) of the system. Please refer to the manufacturer's documentation for further details.

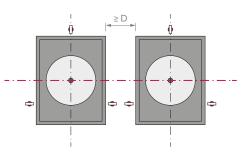


Installation process

Install the units by following the manufacturer's instructions. The only valid installation procedure is by using its Epoxy adhesive + Sink Clips + Z Clips.

Other types of installation (e.g. as Drill + Insert + Screw) are NOT allowed under any circumstances.

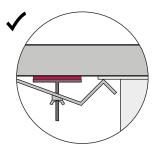

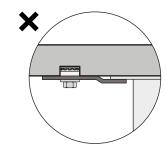

→ Epoxy + Sink Clip + Z Clip.

→ Drill + Insert + Screw.

 → MANDATORY use of Invisamat (silicone rising mat).
→ Never heat empty cookware, as it can reach very high temperatures and damage both Invisamat and the Dekton® surface.
→ Follow the appliance manufacturer's recommendations

for proper ventilation under the countertop.

→ Find further information on this induction system at <u>www.invisacook.com</u>.

 \rightarrow Cosentino $^{\odot}$ Warranty does not cover possible damages caused by improper use.